

A-1037/A-1038

Quick Start Guide

Lithium Electric Pallet Jack

Rated Load Capacity: 3,300/4,400lbs

Fork Size: 48x27 inch



Scan the QR Code for more information.

Thank you for choosing our full electric pallet jack.

For safe and correct use, please read this manual carefully and follow all instructions, precautions, and prohibitions. Keep this manual for future reference. Product specifications may change without notice. If there is any difference between this manual and the actual product, the product shall take precedence.

TABLE OF CONTENTS



INTRODUCTION

1. Warning
2. Parts Introduction
3. Installation Instruction
4. Inspection & Maintenance

1. WARNING

● Operating Environment



1. Operate this product only on hard, level surfaces.
2. Do not operate if the ambient temperature is above 104°F (40°C) or below 14°F (-10°C).
3. Do not operate in flammable, explosive, or corrosive environments.
4. Do not operate in cold storage or humid environments.

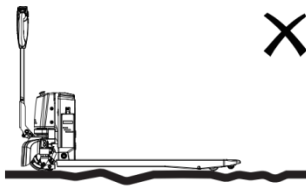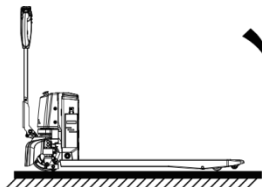

● Operational Guidelinest




1. Personnel Safety

- Do not carry passengers.
- Do not stand on or go under the forks.

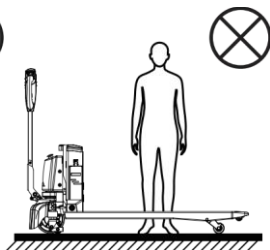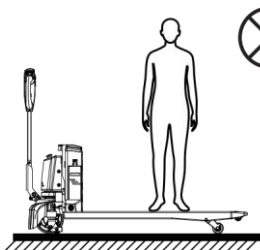

2. Load Limits


- Do not exceed the rated load capacity.
- Place loads securely in the center of the forks.
- Do not transport loose or unstable items.

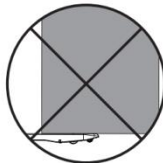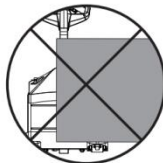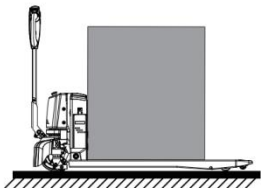


● Traveling and Lifting Guidelines

1. Starting and Traveling

- Wear safety shoes and ensure familiarity with all controls before starting the product.
- Pull the emergency stop switch and turn the key to the right.
- Sound the horn to alert nearby personnel before starting.
- Press handle down, Slowly rotate the forward/reverse rocker on the control handle to control the product's forward or backward speed and direction.

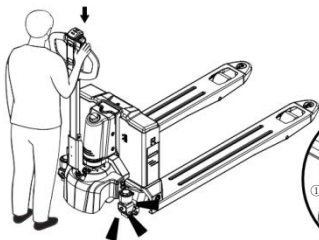


Di!~

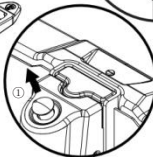


2. Braking

- Release the forward/reverse rocker. The product will automatically apply regenerative braking.
- Move the control handle to the vertical or horizontal position.
- The product will automatically engage electromagnetic braking.

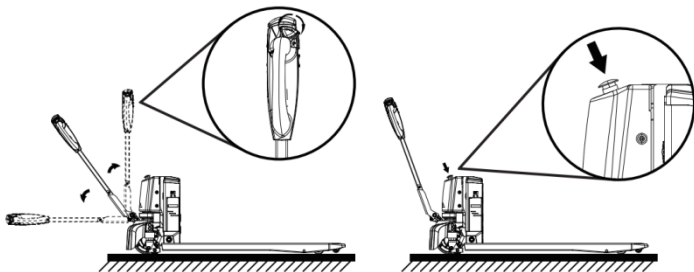


3. Lifting and Lowering

- Press the raise button on the control handle to lift the forks.
- Press the lower button on the control handle to lower the forks smoothly.

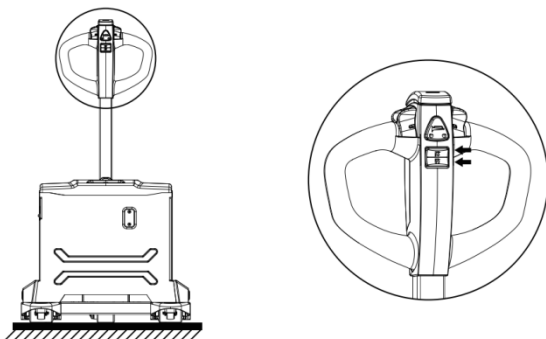


4. Ramp Operation

- When ascending with a load, keep the forks facing uphill.
- When descending, operate the product in reverse, keep the forks facing uphill, and control speed carefully.

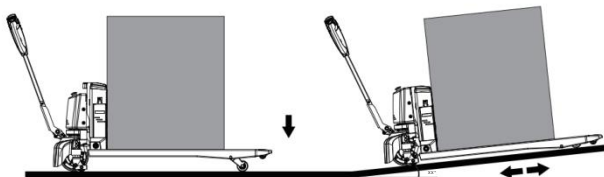


5. Charging

- Lower the forks and turn off the power.
- Charge the product in a well-ventilated area using the designated charger.
- The product is equipped with a lithium battery and can be charged as needed.
- If the product is unused for more than one month, charge the battery monthly to maintain its performance.

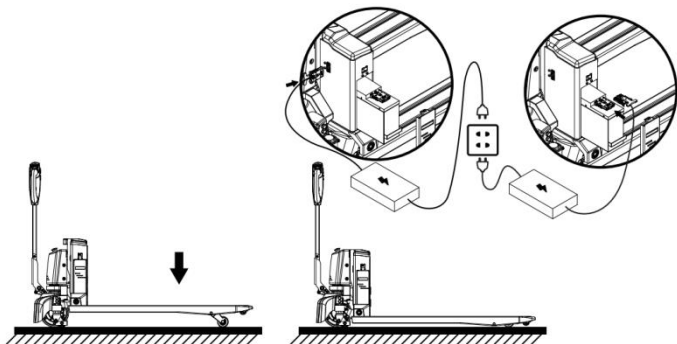


2. Parts Introduction

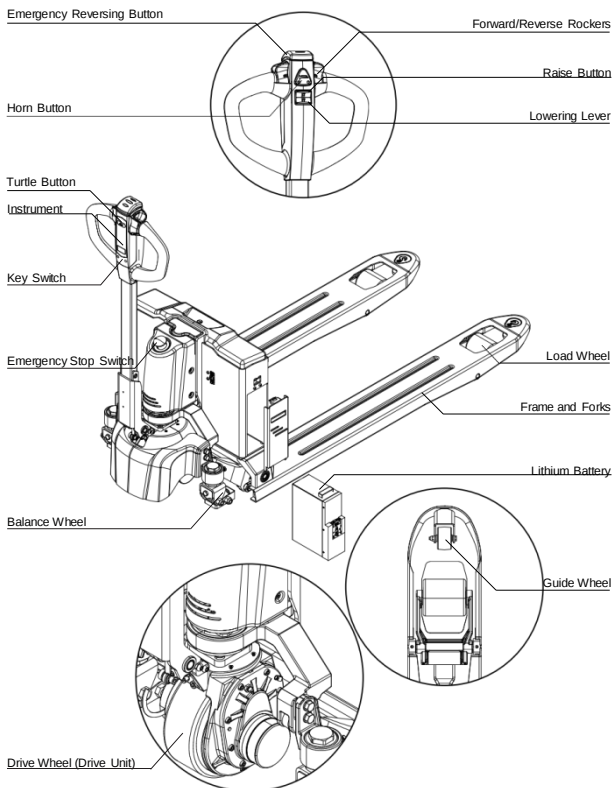


3. Installation Instruction


- The product is mostly pre-assembled at the factory.
Before use, only the control handle needs to be installed.

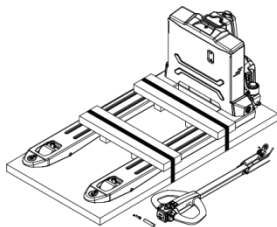



- ① Carefully unpack and check accessories (Charger, Manual, Handle)

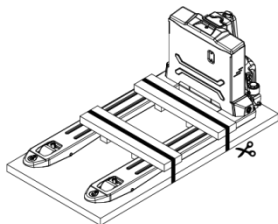



- ② Remove all straps and the protective foam/wood from the handle.

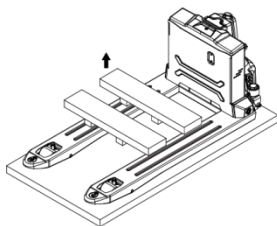

 

- ③ Remove all straps and the protective foam/wood from the handle.

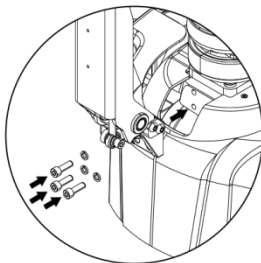



- ④ Align the handle with the mounting holes on the wheel assembly. Secure it firmly using screws and washers.
- Important: Tighten the screws in a diagonal pattern and apply high torque to ensure a secure fit.

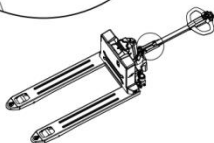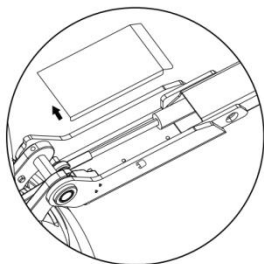



⑤ Remove the handle cover.

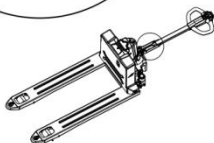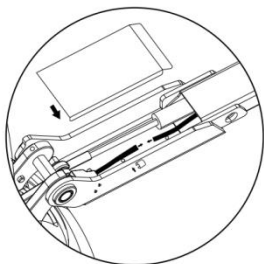

 ⑥ Connect the wire plugs and ensure the connection is stable. Secure the wires with a cable tie, then reinstall the cover.

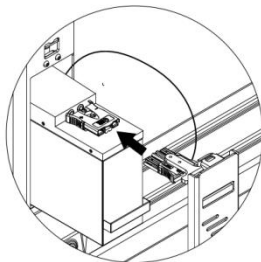

⑦ Open the battery compartment and verify that the battery cables are connected properly.

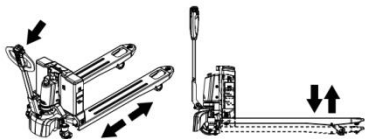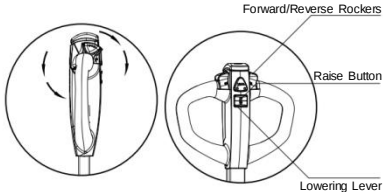

⑧ Press the handle to the drive position and test all functions (Throttle, Lift, Horn, Turtle Speed).

4. Inspection & Maintenance

Conducting a thorough inspection of the product can help prevent malfunctions and ensure it achieves its expected service life. Maintenance hours are based on 8 hours of operation per day, 200 hours per month. For safe operation, the product should be inspected and maintained according to the maintenance schedule.

● 200-Hour Inspection and Maintenance

No.	Component	Inspection or Service
1	Overall Condition	Check for visible damage or oil leaks (hydraulic oil, gear oil).
2	Fastener	Check all bolts, especially on wheels and handle, for looseness
3	Electrical System	Check the battery charge level and ensure the horn and emergency stop switch function properly.
4	Brake (Interlock Switch)	Check that the brake works effectively when the handle is in vertical and horizontal positions.
5	Wheel	Inspect drive wheels and load wheels for serious wear or entanglement with debris.
6	Horn	Check sound function.
7	Hydraulic Oil	Check oil level. Replace after the first 500 hours, then every 1,000 hours thereafter.
8	Control Handle	Check for binding or looseness in steering.
9	Frame & Fastener	Inspect for cracks; check if all fasteners are secure.
10	Connecting Rod Wheel Carrier	Inspect for cracks, bends, or deformation.
11	Hydraulic Pump & Oil Pipe	Check for leakage.
12	Power Plug	Ensure proper function and check for damage.
13	Emergency Stop Switch	Ensure proper function and check for damage.
14	Key Switch	Ensure proper function and check for damage.
15	Brake	Clean dirt and dust from brake pads; check wear condition.
16	Drive Wheel	Check for wear; replace if function is impaired.
17	Fork Wheel, Guide Wheel & Bearing	Check for wear; replace if function is impaired.
18	Lubrication	Apply grease to all bearings and pivot points.

● Maintenance Intervals for Consumables and Components

Component	Inspection or Service	Interval (hours)
Fork Wheel Bearing	Replace	1,200
Fork Wheel	Replace	1,200
Seal	Replace	1,200
Gearbox	Change lubricant	1,000
Hydraulic Oil	Replace	1,000
Drive Wheel Tire	Replace	2,000
Drive Motor	Inspect brushes and bearings	1,000
Oil Pump Motor	Inspect brushes and bearings	1,000