

A-3050/A-3047/A-3049/ A-3051

Quick Start Guide

FULLY ELECTRIC STACKER

Rated Load Capacity : 3,300lbs

Lifting Height: 98"-138"



Scan the QR Code for more information.

Thank you for choosing our fully electric stacker.

For safe and correct use, please read this manual carefully and follow all instructions, precautions, and prohibitions. Keep this manual for future reference. Product specifications may change without notice. If there is any difference between this manual and the actual product, the product shall take precedence.

TABLE OF CONTENTS



INTRODUCETION

1. Warning
2. Parts Introduction
3. Installation Instruction
4. Inspection & Maintenance

1. WARNING

- Operating Environment



1. Operate this product only on hard, level surfaces.
2. Do not operate if the ambient temperature is above 104°F (40°C) or below 32°F (0°C).
3. Do not operate in flammable, explosive, or corrosive environments.
4. Do not operate inside cold storage areas.
5. Do not operate in rainy conditions.

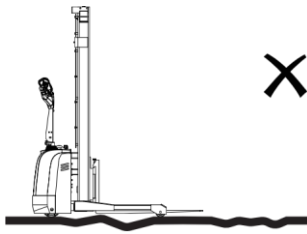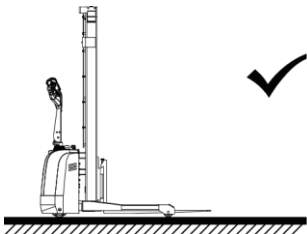

- Operational Guidelinest




1. Personnel Safety

- Do not carry passengers.
- Do not stand on or go under the forks.

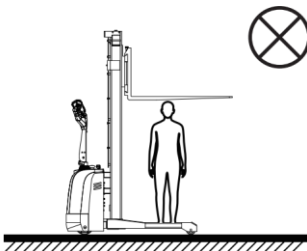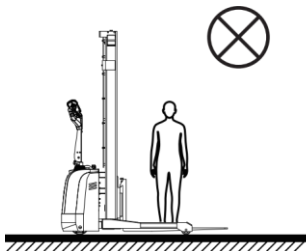


2. Load Limits

- Do not exceed the rated load capacity.
- Place loads securely in the center of the forks.
- Do not transport loose or unstable items.

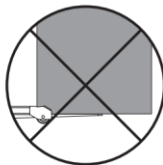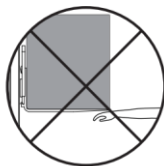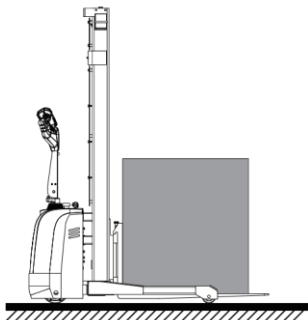

LOAD INSTRUCTION

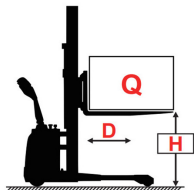


$H_{(in)}$	$D_{(in)} / Q_{(lbs)}$	
	20	24
63	3300	3300
79	3300	3300
98	3300	3300
118	3300	3300
130	3300	3300
138	2850	2850

● Traveling and Lifting Guidelines


1. Starting and Traveling

- Wear safety shoes and ensure familiarity with all controls before starting the product.
- Pull the emergency stop switch and turn the key to the right.
- Sound the horn to alert nearby personnel before starting.
- Press handle down, Slowly rotate the forward/reverse rocker on the control handle to control the product's forward or backward speed and direction.

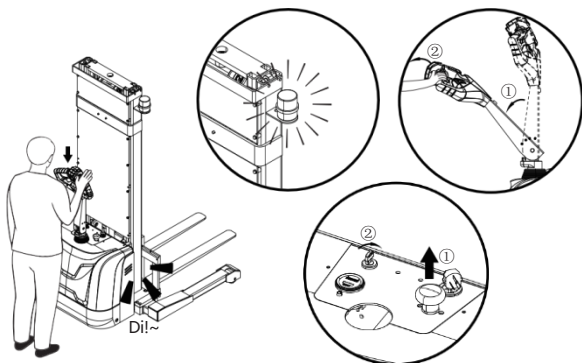





2. Braking

- Release the forward/reverse rocker. The product will automatically apply regenerative braking.
- Move the control handle to the vertical or horizontal position.
- The product will automatically engage electromagnetic braking.

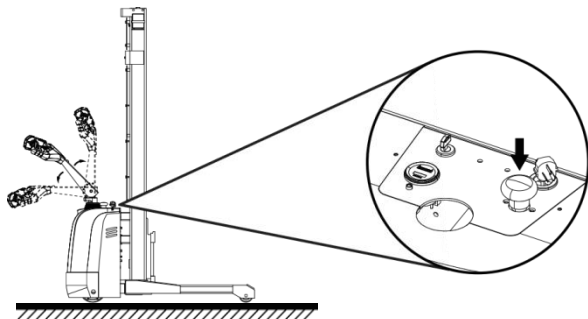


3. Lifting and Lowering

- Press the raise button on the control handle to lift the forks.
- Press the lower button on the control handle to lower the forks smoothly.

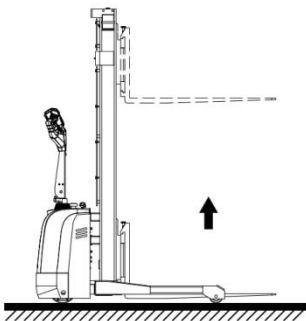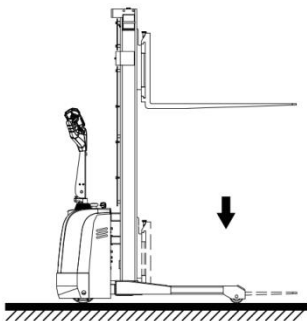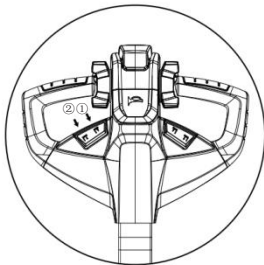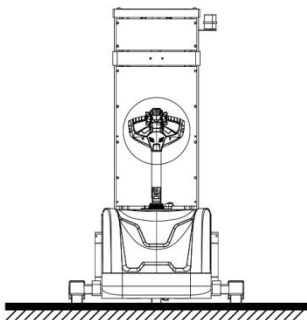


5. Ramp Operation

- When ascending with a load, keep the forks facing uphill.
- When descending, operate the product in reverse, keep the forks facing uphill, and control speed carefully.


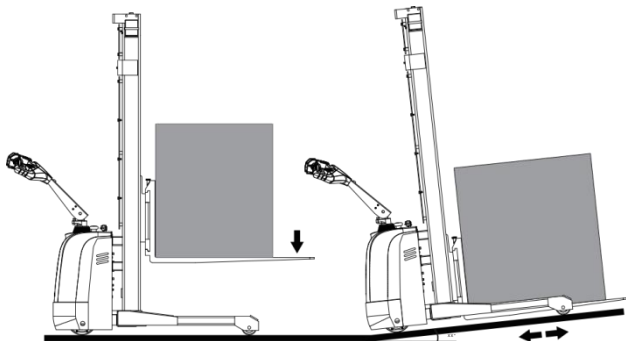


6. Charging




- Lower the forks, turn off the power, and remove the key.
- Charge the product in a well-ventilated area using the designated charger.
- If the product is unused for more than one month, charge the battery monthly to maintain its performance.

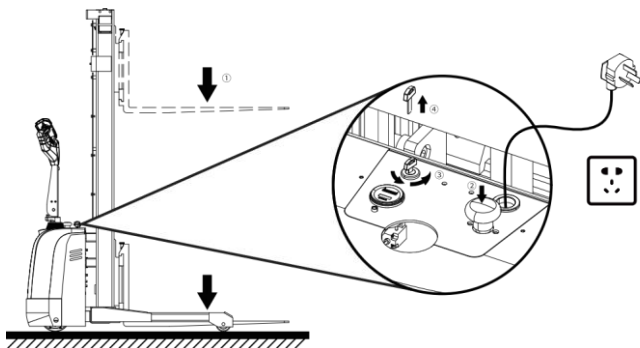

2. Parts Introduction

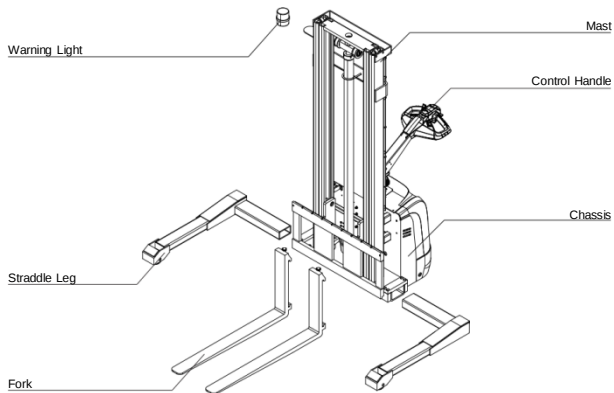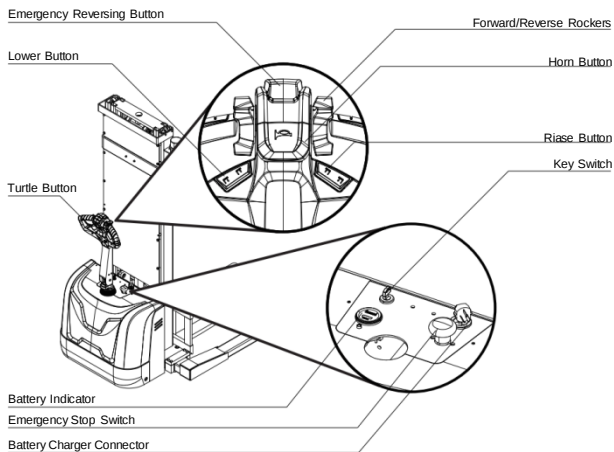


 3. Installation Instruction

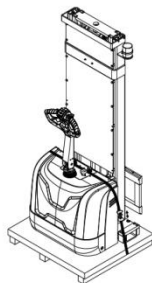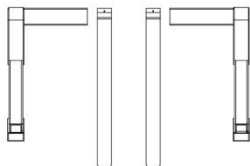


- ① Carefully unpack and check accessories (Manual)


- ② Removing all securing straps. Remove the forks and legs

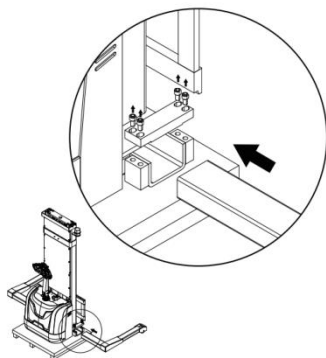


- ③ Install the legs and mounting plates, tightening the screws diagonally in sequence.

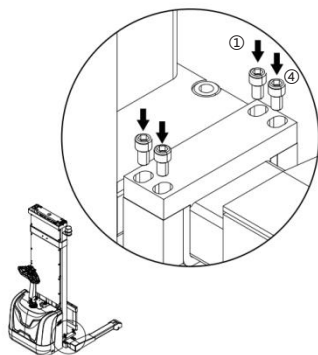


- ④ Install the legs and mounting plates, tightening the screws diagonally in sequence.

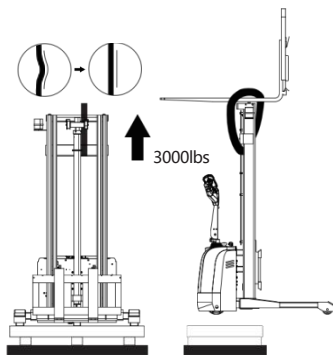


- ⑤ Lift & Land Use slings (rated >3000 lbs) through the mast crossbeam. Lift the unit with a hoist or forklift, remove the pallet, and lower the unit safely to the ground.

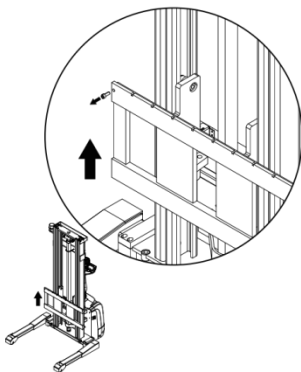



- ⑥ Once the stacker is stable on flat ground, re-tighten the screws on the straddle legs. Raise the fork carriage slightly (for easier access) and remove the Stop Screws on both sides of the carriage.

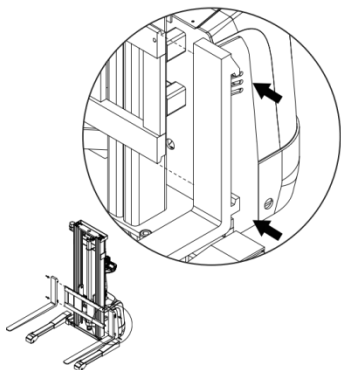



- ⑦ Slide the two forks onto the carriage from the sides and adjust them to the desired width.

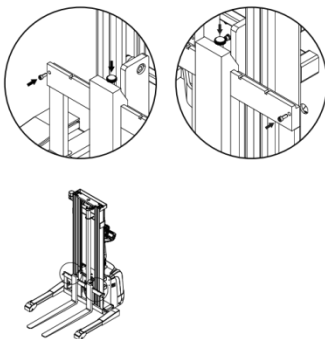

- ⑧ Engage the Locking Pins to set the fork position. Re-install and tighten the Anti-fall Screws on both sides to prevent the forks from sliding off.

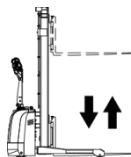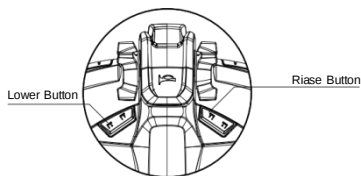

⑨ Test all functions: Tilt Forward/Backward.

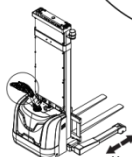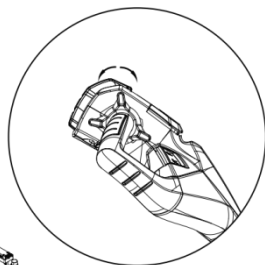

⑨ Test all functions: Throttle, Lift/Lower, Horn, Turtle Speed

4. Inspection & Maintenance

Conducting a thorough inspection of the product can help prevent malfunctions and ensure it achieves its expected service life. Maintenance hours are based on 8 hours of operation per day, 200 hours per month. For safe operation, the product should be inspected and maintained according to the maintenance schedule.

● 200-Hour Inspection and Maintenance

No.	Component	Inspection or Service
1	Overall Condition	Check for abnormalities.
2	Horn	Check sound function.
3	Control Handle	Move the handle between Area A and Area B; ensure the brake engages with a clicking sound.
4	Control Handle	Check for binding or looseness in steering.
5	Frame & Fastener	Inspect for cracks; check if all fasteners are secure.
6	Connecting Rod Wheel Carrier	Inspect for cracks, bends, or deformation.
7	Oil Pipe	Check for leakage.
8	Lift Cylinder	Check for leakage.
9	Charger Connector	Ensure proper operation.
10	Key Switch	Ensure proper operation.
11	Brake	Clean dirt and dust from brake pads; check wear condition.
12	Fork Wheel & Bearing	Check for wear; replace if function is impaired.

● Maintenance Intervals for Consumables and Components

Component	Inspection or Service	Interval (hours)
Fork Wheel Bearing	Replace	1,200
Fork Wheel	Replace	1,200
Seal	Replace	1,200
Gearbox	Change lubricant	1,000
Hydraulic Oil	Replace	1,000
High-Pressure Oil Pipe	Replace	2,000
Hydraulic Tank Filter	Clean	1,000
Drive Motor	Inspect brushes and bearings	1,000
Steer Motor (for electric power steering models)	Inspect brushes and bearings	1,000
Oil Pump Motor	Inspect brushes and bearings	1,000